

HUAWEI EG8145X6

Installation

Button functions

F
Fibre

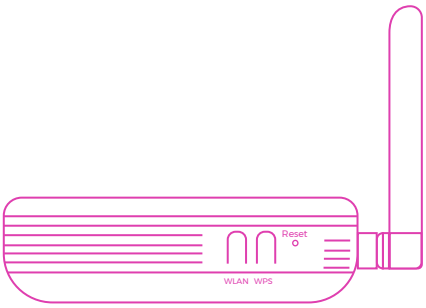

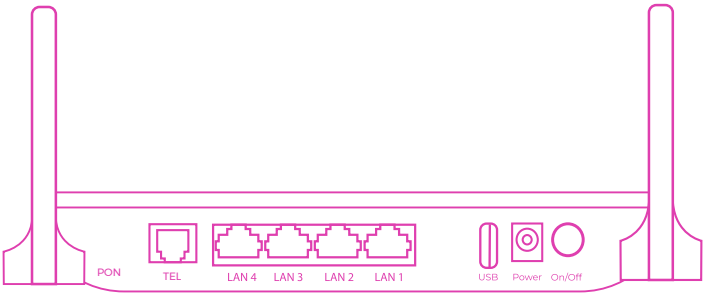


Left side

- **WLAN:** turns the wireless network on and off.
- **WPS:** setting up the WPS connection.
- **RESET:** factory settings reset.
  Do not press.

Rear

- **On/Off:** switching the device on and off.

LED meanings

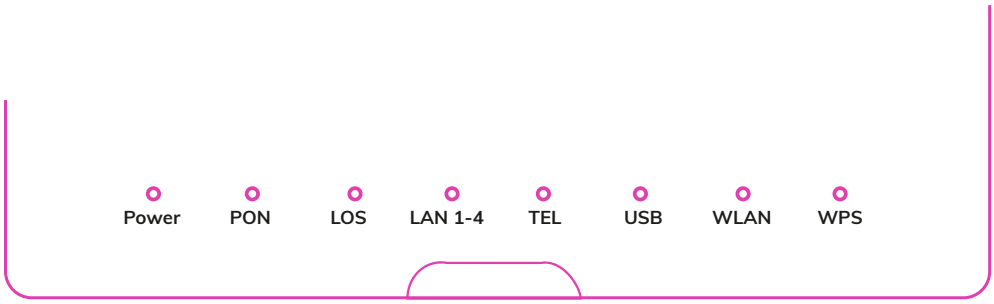

LED	STATUS	MEANING
Power	ON	Power supply available
PON	ON	* Line present
LOS	FLASHING	* Line absent
LAN 1-4	ON	Device(s) connected by cable
TEL	ON	VoIP line present
USB	ON	USB port for sharing local files
WLAN	ON	The wireless network is active
WPS	FLASHING	· WPS pairing in progress · Can be enabled via the web interface (disabled by default)

* only with connection via the PON optical port

INTRED
CONNESSI SEMPRE

Intred has been providing cutting-edge telecommunications solutions for business and residential users for years.

It offers high value-added services for internet connectivity and for your home telephone.


Intred S.p.a - Via Pietro Tamburini, 1 - 25136 Brescia

HUAWEI EG8145X6

Installation

WARNINGS


- To use the router, use the power supply provided or a device compatible with the electrical characteristics of the equipment.
- NEVER restore the router to its factory settings by means of a reset. This operation could make it necessary to replace the router.
- The router access password is on the label on the back of the device, under password.
- The password for the WiFi network is on the label on the back of the device, under WLAN Key.

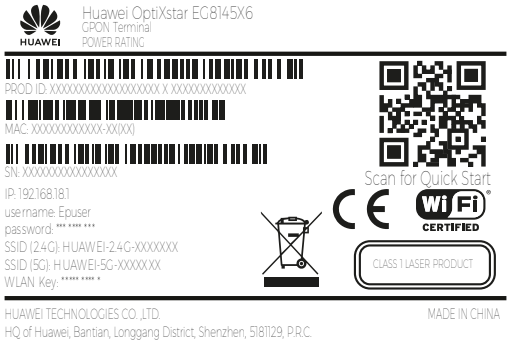



ATTENTION: for privacy reasons we cannot save the equipment settings. If the equipment is replaced, they will not be restored. Save them in a safe place so that you can restore them yourself.

PORTS

- **TEL:** RJ11 port for connecting an analogue telephone or another analogue terminal device (if provided for by the contract).
- **LAN 1-4:** four Ethernet ports for connecting computers and other network devices.
- **USB:** USB port for sharing local files.

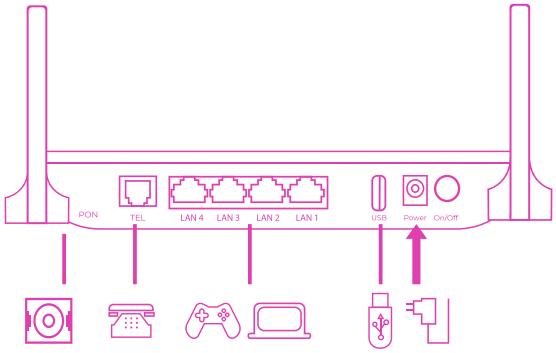

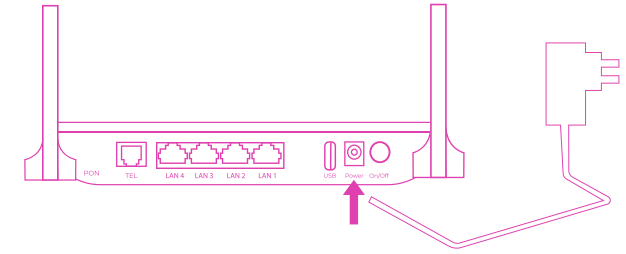

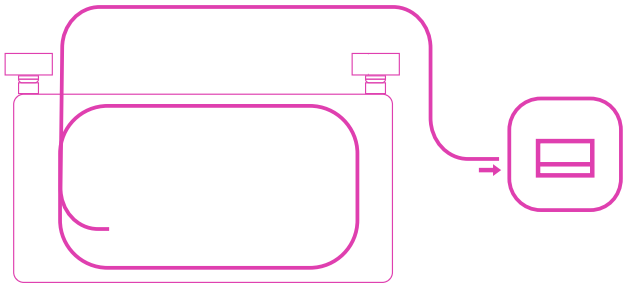

CABLE CONNECTION

- POWER PORT: connection to the mains
  1. Take the power supply provided with the HUAWEI router.
  2. Connect the power supply to the power port of the HUAWEI router.
  3. Plug the power supply into the mains socket.
  4. Press the On/Off button: the POWER light will come on.
- WALL OPTICAL PORT: Optical Fibre connection
  1. After removing the protective cap from the green connector, insert one end of the cable into the optical port installed by the technician during installation.
  2. After removing the protective cap from the other end of the green connector, connect it to the (green) PON fibre port of the router (as shown in the figure).

Do not disconnect the router from the mains power socket or from the data connection during the activation phase (which may take up to 24 hours from when the device is connected).

INTRED
CONNESSI SEMPRE

Intred has been providing cutting-edge telecommunications solutions for business and residential users for years.

It offers high value-added services for internet connectivity and for your home telephone.

Intred S.p.a - Via Pietro Tamburini, 1 - 25136 Brescia

This document is an English translation of the original Italian document and is provided for ease of reference. The translation may contain errors, omissions or inaccuracies. In the event of any discrepancy or inconsistency between this translation and the Italian original, the Italian original shall prevail to the extent permitted by applicable law.